

# Wall Mounted Slide/Grab Bar & ADA Hand Shower with non-positive shut-off T724, T736, T748 Series Installation Guide



### **Model Numbers**


T724

24 inch slide/grab bar with polished chrome or satin nickel ADA hand shower T736

36 inch slide/grab bar with polished chrome or satin nickel ADA hand shower T748

48 inch slide/grab bar with polished chrome or satin nickel ADA hand shower

### **Tools and Materials**



## Compliance

- -ASME A112.18.1/CSA B125.1
- -WaterSense 1.5 gpm and 2.0 gpm




# **☎** Need Help?

Symmons customer service: Phone: (800) 796-6667 gethelp@symmons.com Mon - Fri 7:30 am - 7:00 pm EST

www.symmons.com/service

- www.symmons.com
- Technical help
- Product information
- Warranty policy

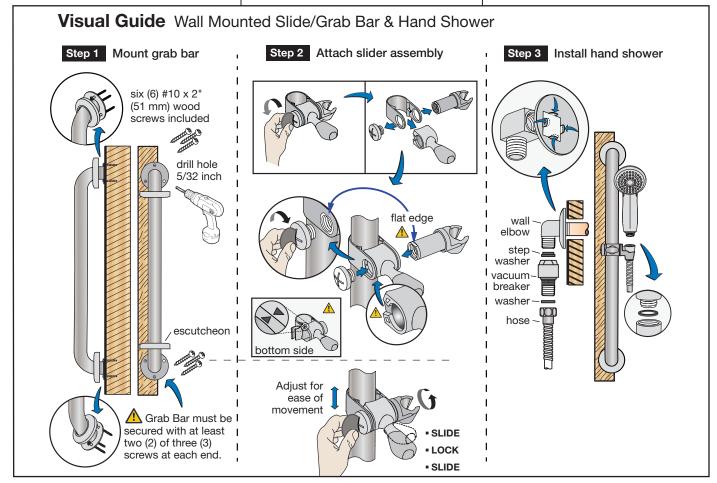

For California Residents

### **Installation Notes**

### **Grab Bar Location**

For proper mounting heights and location consult with your state and local code official having jurisdiction over the installation.

### **Solid Support**

- Grab Bar must be mounted with both ends positioned over a wall stud. A stud finder can be used to locate wall studs.
- Secure through wall board or tile to the wall stud so as to hold a minimum of 250 pounds of force.

 At least two (2) of the three (3) screws provided must be used on each end of the Grab Bar to properly secure.

Note: Standard size wall stud limits using more than two (2) screws.

### **Mounting Grab Bar**

- Drill all holes through wall board into wood wall studs using a power drill and a 5/32 inch drill bit.
- Ceramic tiles If installing Grab Bar

over ceramic tiles, first drill a pilot hole through the tile using a 1/4 inch carbide tip drill bit to prevent damage to the tiles.

Next, drill a pilot hole into the wood wall stud using the 5/32 inch drill bit.

### Care and Cleaning

Mild soap and water or a non-abrasive cleaner is recommended for cleaning.

