


# Wall Mounted Grab Bar SGB

## **Installation Instructions**

#### **Model Numbers**

- SGB-12..... 12 inch ADA Grab Bar
- SGB-18...... 18 inch ADA Grab Bar
- SGB-24...... 24 inch ADA Grab Bar
- SGB-36...... 36 inch ADA Grab Bar
- SGB-42...... 42 inch ADA Grab Bar
- SGB-48...... 48 inch ADA Grab Bar

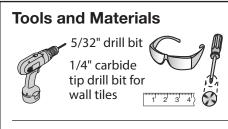

**Finish Options** Append appropriate -suffix to model number

- □ -STN Satin Nickel
  - Polished chrome (standard finish)


## Need Help?

Symmons customer service: P: (800) 796-6667 gethelp@symmons.com Mon - Fri 7:30 am - 6:00 pm EST

- www.symmons.com/service
- Technical help
- Product information
- Warranty policy

#### Compliance

2010 ADA Standards for Accessible Design Grab bar assembly complies with the applicable requirements.

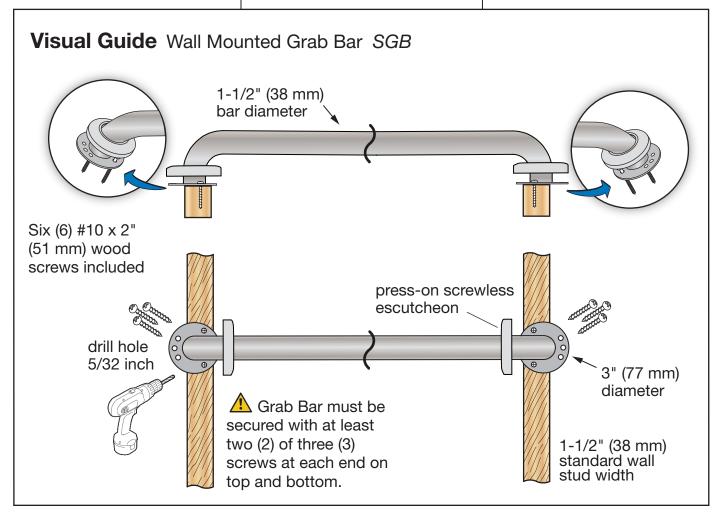

### **Installation Notes**

#### **Grab Bar Location**

For proper mounting heights and location consult with your state and local code official having jurisdiction over the installation.

#### Solid Support

- Grab Bar must be mounted with both ends positioned over a wall stud. A stud finder can be used to locate wall studs. Contractor is responsible for installing Grab Bar to wall studs as instructed.
- Secure through wall board or tile to the wall stud so as to hold a minimum of 250 pounds of force.
- At least two (2) of the three (3) screws provided must be used on each end of the Grab Bar to properly secure.

Note: Standard size wall stud limits using more than two (2) screws.

#### **Mounting Grab Bar**


- Drill all holes through wall board into wood wall studs using a power drill and a 5/32 inch drill bit.
- Ceramic tiles If installing Grab Bar over ceramic tiles, first drill a pilot hole through the tile using a 1/4 inch carbide tip drill bit to prevent damage to the tiles.

Next, drill a pilot hole into the wood wall stud using the 5/32 inch drill bit.

#### Care and Cleaning

Mild soap and water or a non-abrasive cleaner is recommended for cleaning.

▲ WARNING: This product can expose you to chemicals including lead, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www. P65Warnings.ca.gov.

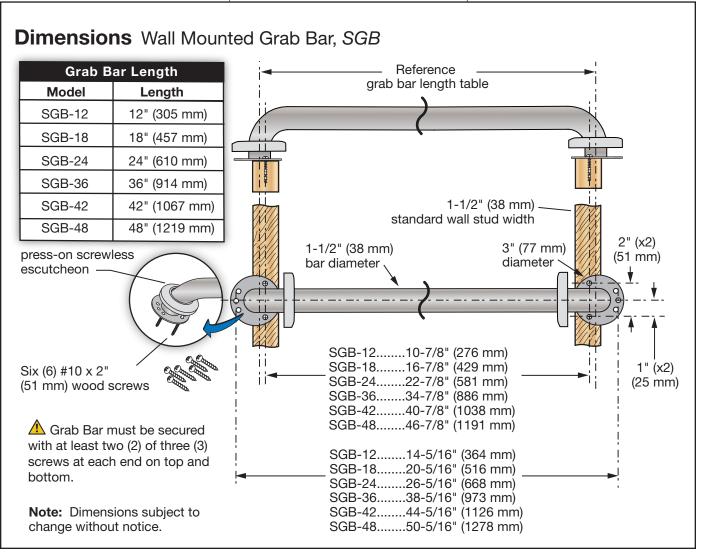

Symmons Industries, Inc. = 31 Brooks Drive = Braintree, MA 02184 = Phone: (800) 796-6667 = Fax: (800) 961-9621 Copyright © 2018 Symmons Industries, Inc. = symmons.com = gethelp@symmons.com = ZV-1088 REV B = 082118